

Food machine hire -
Details, instructions & risk assessment - 0141 370 1986

Name of machine	What's included
Candy floss machine	Mix of candy floss bags and sticks, sugar
Hot dog Machine	Hot Dogs, napkins, tomato sauce, latex gloves * please note the rolls are not included
Slush machine	Slush syrup, cups, straws
Popcorn machine	Popcorn, scoop, popcorn bags
Nacho machine	Nachos, salsa dip, Jalapeno, napkins, nacho trays

Candy floss machines:

1. Position your assembled Candy Floss Machine on a flat surface or table close to a plug socket and make sure that the non-slip rubber feet are secure on the surface.
2. Plug the power lead into a suitable plug socket.
3. Switch the machine ON and wait for about 3 minutes for the spinner to heat up to the correct temperature. Do not touch this part as it will get very hot.
4. Switch the machine OFF after 3 minutes and wait for the spinner to stop spinning.
5. Measure out one scoop of sugar using the measuring spoon included and carefully pour into the centre of the spinner.
6. REMEMBER that the spinner becomes hot; do not touch this with your hands.
7. Switch ON the Candy Floss Maker, and after a few minutes you will be able to see a candyfloss web being formed. In a quick motion move a paper cone or wooden stick in a clockwise motion around the spinner. Keep twisting until a candy floss layer has formed around the cone or stick.
8. Once the first layer has been formed, hold the cone or stick horizontally over the machine. Keep twisting the paper cone or stick with your fingers.
9. Once the machine stops producing candy floss, this indicates that all of the sugar has been melted. Switch OFF the Candy Floss Maker and wait for the spinner to stop spinning.
10. Your candy floss is now ready to eat.
11. To make more candy floss simply add more sugar using the measuring scoop to the center of the spinner and repeat the process.

When using your Candy Floss Machiner, the standard safety precautions listed below must be followed.

1. Read all instructions carefully before using the appliance and retain this user guide for future reference. 2. Do not operate this appliance if the base unit, cable or mains plug are showing any sign of damage. 3. This appliance should not be assembled or operated by children.
4. Do not touch the Spinner with your fingers during or after use as it becomes very hot. 5. Never leave this appliance unattended whilst in use.
6. Do not let the cord hang over the edge of a table, or come into contact with a hot surface. 7. Do not immerse the Candy Floss Maker in water or other liquid as this may cause injury due to electric shock and will also damage the machine.
8. Before cleaning, always turn off the power and disconnect the mains plug from the plug socket.

Slush machine liquid must not go below the minimum line as this could cause the machine to break where you will be liable for damages.

Hot dog machines are HOT and caution must be taken whilst using this. Water must be kept just above the elements on the lower level of the machine. If water dries out, this could break the machine where you will be liable

for damages. Please note that hot dog rolls are not included with the hotdog machine.

FOOD MACHINE DISCLAIMER SPLASH INFLATABLES / EVENT NINJA / JUMP4FUN INFLATABLES

BY GOING AHEAD WITH THIS HIRE I AGREE THAT I HAVE READ THE ABOVE AND AGREE TO COMPLY BY THESE INSTRUCTIONS AND SAFETY RULES AND TAKE FULL RESPONSIBILITY FOR THE USE OF THE CANDY FLOSS MACHINE AND OTHER MACHINES HIRED TO YOU.